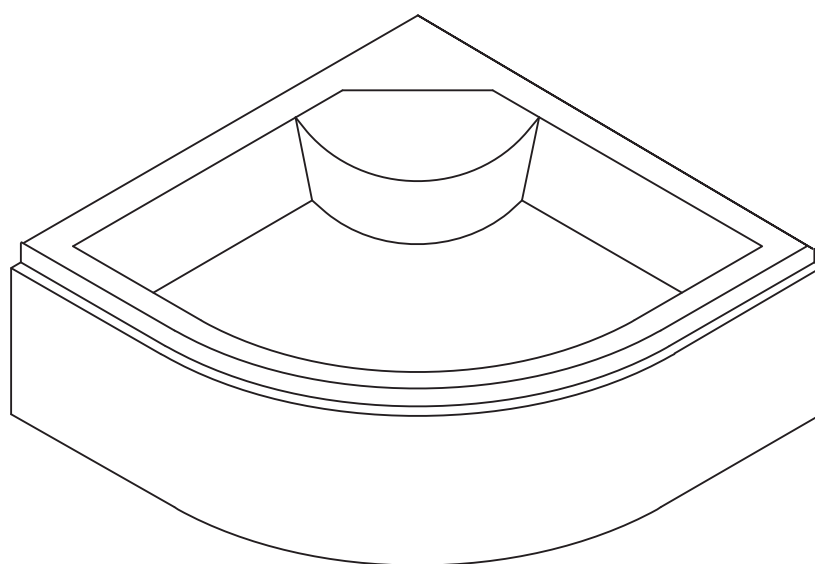


- D Montageanleitung  
E Mounting instructions  
HR Naputci za montažu  
SLO Navodila za montažo  
HU Szerelési útmutató  
RO Instrucțiuni de montaj  
CZ Montážní návod  
SK Montážní návod  
BG Инструкции за инсталиране  
PL Instrukcja instalacji  
GR Οδηγίες Εγκατάστασης  
IT Istruzioni per l'installazione



Sanotechnik Handelsgesellschaft m.b.H.  
AUSTRIA

Industriestraße 5  
A-2752 Wöllersdorf  
Tel.: 0043/2622/421 93-0  
Fax: 0043/2622/421 93-6

Email: [office@sanotechnik.at](mailto:office@sanotechnik.at)  
[www.sanotechnik.com](http://www.sanotechnik.com)



Sanotechnik RUMĂNIEN S.R.L.  
ROMANIA  
Tancabesti, DN 1, KM 26,5  
Com. Snagov, jud. Ilfov  
Tel.: +40 21 350 13 43  
Fax: +40 21 350 13 44

[office@sanotechnik.ro](mailto:office@sanotechnik.ro)  
[www.sanotechnik.com](http://www.sanotechnik.com)



SANOTECHNIK d.o.o.  
SLOVENIA  
Stritarjeva ulica 24  
SI-2000 Maribor  
Tel.: +386 2/421 33 50  
Fax: +386 2/421 33 58

[info@sanotechnik.si](mailto:info@sanotechnik.si)  
[www.sanotechnik.com](http://www.sanotechnik.com)



SANOTECHNIK Hungária Kft.  
HUNGARY  
Nagytétényi út 112  
H-1222 Budapest  
Tel.: +36 1/424 06 70  
Fax: +36 1/424 06 79

[info@sanotechnik.hu](mailto:info@sanotechnik.hu)  
[www.sanotechnik.com](http://www.sanotechnik.com)



SANOTECHNIK Bulgaria EOOD  
BULGARIA  
3, Georgi Benev St.  
BG - 4027 Plovdiv  
Tel.: +359 32/9611 01  
Fax: +359 32/9611 02

[office@sanotechnik.bg](mailto:office@sanotechnik.bg)  
[www.sanotechnik.com](http://www.sanotechnik.com)

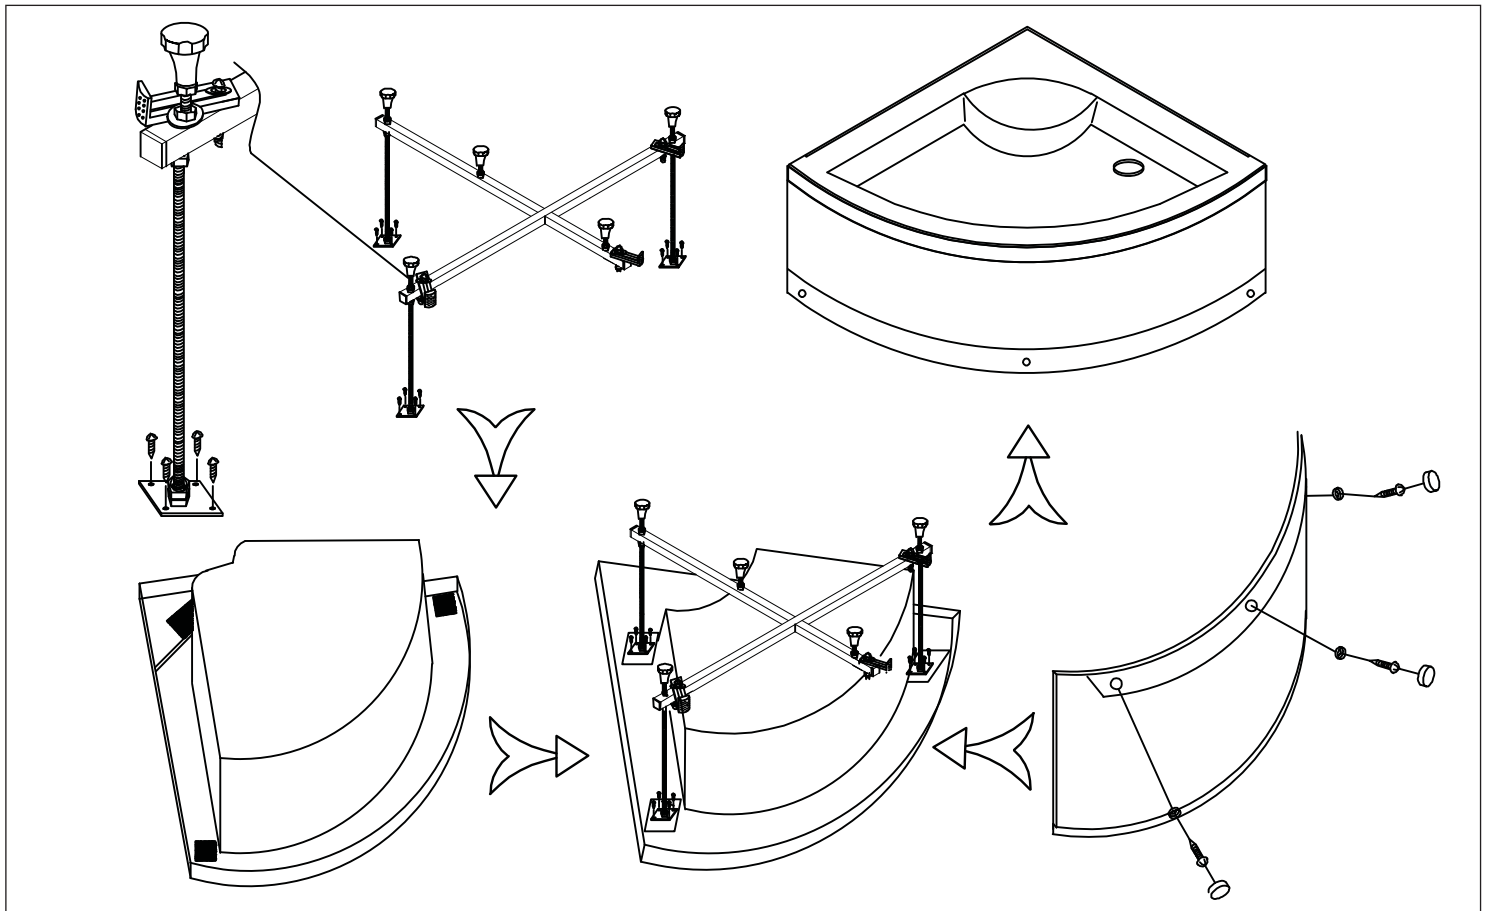
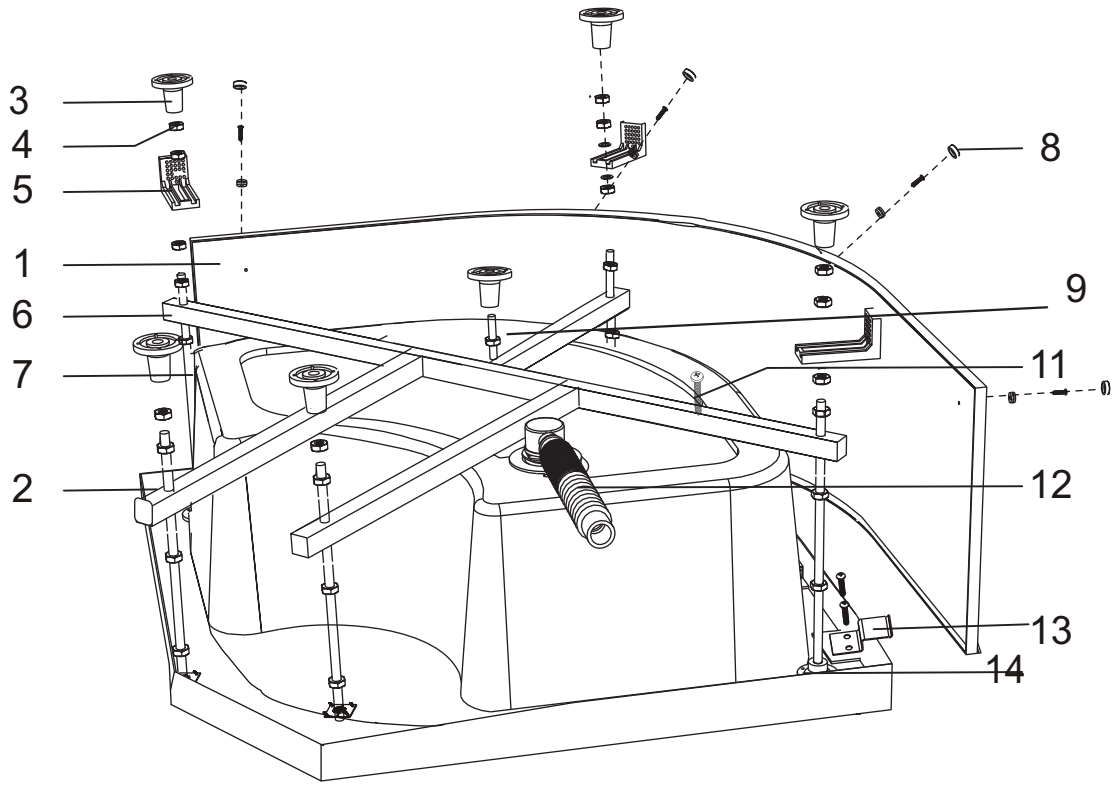
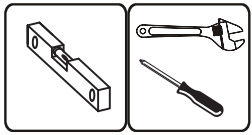















SANOTECHNIK Italia srl  
ITALIA  
Via Carlo Alberto 240  
92024 Canicatti  
Tel.: +39 0922 1807908  
Fax: +39 0922 1807908

[sanotechnikitalia@gmail.com](mailto:sanotechnikitalia@gmail.com)  
[www.sanotechnik.com](http://www.sanotechnik.com)

Symbol foto

# T25W



 X1	 X1	 M12 X6	 M12 X26	 X4	 X1	 M12×305 X5	 ST3.5X16 X4	 M12×70X1	 ST3.5X35 X5	 X1	 ST3.5X16 X5	 ST3.5X16 X5
--	---	---	--	---	---	---	--	---	--	---	--	--

## ◆ Installation Steps

**1** Leveling the floor using spirit levels and a plunger. A warning sign is present.

**2** Placing the bathtub on a protective foil. A hand icon and a warning sign are shown next to the word **FOIL**.

**3** Preparing the drain assembly. A warning sign is present.

**4** Mounting the bathtub on legs. A warning sign and a wrench icon are shown.

**5** Filling the bathtub with water to check for leaks. The word **OK** is written on the water.

**6** Attaching the bathtub to the wall panel. A checkmark is shown.

**7** Applying silicone sealant around the bathtub edge. A hand icon, a clock icon, and a warning sign are shown. The word **SILKON** is written on the sealant tube.

**8** Final wall panel installation. A hand icon, a warning sign, and the word **OK** are shown.

**9** Weight limit warning. A hand icon, a warning sign, a **Kg** sign, and three people icons are shown.

**10** Cleaning instructions. A warning sign, a **NO ACID H<sub>2</sub>O<sub>2</sub>** sign, and a **SOAP + H<sub>2</sub>O** sign are shown.